

Robur 1600 PIN

Användarmanual



Låsa upp

Tryck 4-15-siffrig användarkod (fabriksinställd på 1234) eller programmeringskod (fabriksinställd på 4321) + OK. Rätt kod bekräftas med en lång signal och grön hänglås-symbol tänds. Fel kod indikeras med tre korta signaler. Vrid medsols inom 3 sekunder för att öppna.

Låsa

Vrid motsols till låst läge.

Ändra koder

Tryck 4-15-siffrig kod (fabriksinställd på 1234) eller programmeringskod (fabriksinställd på 4321) + OK. Rätt kod bekräftas med en lång signal och grön hänglås-symbol tänds. Tryck OK igen och håll kvar tills grön hänglås-symbol börjar blinka. Tryck Ny 4-15-siffrig + OK. Användar- och programmeringskod kan inte vara samma. Ny kod bekräftas med en lång signal.

Temporär användarkod

Aktivera Temporär användarkod genom att låsa upp med programmeringskoden. Tryck OK igen och håll kvar tills grön hänglås-symbol börjar blinka. Tryck 44 + OK. Programmeringen bekräftas med en lång signal.

Programmera Temporär användarkod genom att trycka OK Ny temporär användarkod + OK.

Avaktivera Temporär användarkod genom att låsa upp med programmeringskoden. Tryck OK igen och håll kvar tills grön hänglås-symbol börjar blinka. Tryck 43 + OK. Programmeringen bekräftas med en lång signal.


Låg batterinivå


Låg batterinivå indikeras med två korta signaler samtidigt som batteri- och hänglås-symbol blinkar en gång. Batteri 3V CR2032.


Robur 1600 PIN

User's Manual



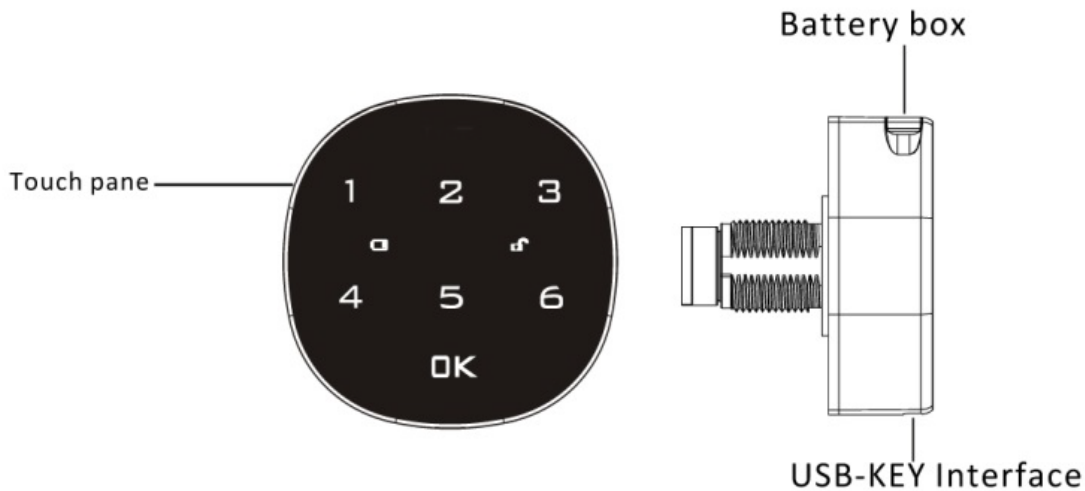

 Low voltage indicator light

 Unlocking Indicator light


How to operate

■ Lock & unlock

Unlock


1. Input factory default password “1234+OK”
Or input factory default management password “4321+OK”

2. Buzzer gives out a long di... sound

3. When the green indicator light  is on

4. Rotate the knob within 3 seconds to open the lock

When password is wrong, alarming sound di.. di.. Di.. 3 times.

When lock shows this signal  means low voltage

Note: when input management password to unlock, user password will be changed back to default 1234





Lock

Rotate back the knob to lock position

■ Setting

1- Change password

1. Input current user password +OK or management password +OK
buzzer gives out a long di sound,  will be on

2. Press OK at least 2 seconds,  flash



3. Input new password, press OK, when you heard a long di sound means password already been changed.





Password can be consisted of 4-15 digits, management password and user password cannot be the same password


Turn on public mode, set temporary password

Turn on public mode

1. Input current management password + **OK**, buzzer gives out a long di..... Sound, Unlocking indicator light  is on
2. Press OK at least 2 seconds, unlocking indicator light  twinkle, press OK again.
3. Input "4 4", press **OK**, when you heard a long di..... sound means public mode already been set.



Set temporary password

1. Press **OK**. Unlocking indicator light  will twinkle
2. Input the new password consisted of 4-15 digits
3. press ok to unlock,  is on with a long di....sound, temporary password already been set.



Note:  flash one time every 3 seconds means the lock has already be taken

Temporary password can be used for 1 time only

Turn off public mode


1. Input current management password + **OK**, buzzer gives out a long di sound, Unlocking indicator light  is on
2. Press OK at least 2 seconds, unlocking indicator light  twinkle, press OK again.
3. Input 4 3, press **OK**, when you heard a long di.... Sound, means public mode already been turned off.

Turn on/off Fake Pin code function




1. Input current management password + **OK**, buzzer gives out a long di sound, unlocking indicator light  is on
2. Press OK at least 2 seconds, unlocking indicator light  twinkle, press OK again.
3. Input 4 2, press OK, when you heard a long di sound means Fake Pincode mode already been turned on.
Input 4 1, press OK, when you heard a long di sound means Fake Pincode mode already been turned off.

Introduced with Anti-Theft Technology and Fake PIN password function you can input any code(s) before or after the real password to prevent the real password being peeped. Maximum 16 digits.

3. Features

1. When password been forgotten, you can get the decode number by providing the code on the lock body to the distributor to decode. The password will be changed back to the original management password “4321” , user password “1234”
When user password been forgotten, you can input master password, the user password will be changed back to the original user password “1234”
2. Introduced with Anti-Theft Technology and Fake PIN password function; you can input any code(s) before or after the real password to prevent the real password being peeped. Maximum 16 digits
3. Auto-alarm will be activated when input wrong password 4 times and the lock will be died for 60 seconds.
4. Automatic power shortage prompts (When lock show this signal ). The lock cannot be operated when the voltage is very low
5. Equipped with 3V Cr2032 batteries, last password will not be lost after changing the battery.

4. Treatment of some common problems.

Problem	Primary cause	Way to solve the problem
When input the password, alarm twice di..di.. Meanwhile   twinkle one time	Too low voltage	Replace batteries
When input the password, alarm di..di.. meanwhile signal  is on, lock cannot be opened	Knob is not in the right position	Turn knob in the right position
Touch button without sound, lock can be opened	Buzzer broken	Change buzzer