



## BRUKSANVISNING STÖLDSKYDDSSKÅP BM SERIEN

### Allmänt

Masterkoden är inlagd från fabrik och tillfälligt inställd på 123456

Låset signalerar med ett pip och blink vid korrekt åtgärd och långt pip och rött ljus vid felaktig åtgärd. Programmera alltid med öppen dörr och kontrollera resultatet innan dörren stängs.

### Att öppna

1. Tryck "ON". Låset signalerar med ett pip och det gröna ljuset tänds.
2. Knappa in kod 1 (fabriksinställd kod 1: 123456)
3. Vrid låsets vred medurs inom 4 sekunder.

### Att låsa skåpet


1. Stäng dörren helt. Se till att inget hamnar i kläm.
2. Vrid vredet moturs till stopp.

### Att ändra Masterkod

1. Öppna låset
2. Tryck "ON" och sedan "ENTER".
3. Tryck 1 och sedan "ENTER".
4. Knappa in nuvarande kod och sedan "ENTER". Låset signalerar med 2 pip och blink.
5. Knappa in ny 6–8 siffrig kod och sedan "ENTER". Låset signalerar med 2 pip och blink.
6. Knappa in den nya 6–8 siffriga koden igen och sedan "ENTER". Låset signalerar med 2 pip och blink.

### Att byta batteri

- När batterinivån är låg indikerar låset genom att den röda lampan blinkar 5 gånger, med tillhörande pip efter att "ON" tryckts in. Byt då genast batteriet som sitter på insidan av dörrens ovansida. Byt till ett alkaliskt 9 volts batteri (6LR61).
- Om batteriet är helt slut kan man nödströmförsörja låset från utsidan på följande sätt:
  1. Lägg emot batteriet på polerna som finns under och ovan "PS", se bilden.
  2. Observera polernas placering + överst – underst.
  3. Slå öppningskoden som vanligt.
  4. Byt batteriet på skåpets insida.

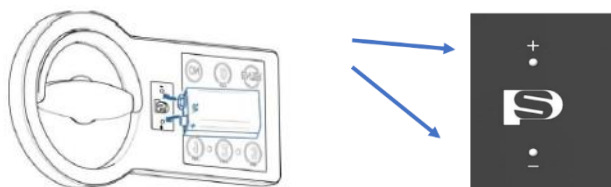



## USER MANUAL ANTI-THEFT CABINET BM SERIES

### General

The master code is entered from the factory and temporarily set to 123456

The lock signals with a beep and flash when the operation is correct, and a long beep and red light when the operation is incorrect. Always program with the door open and check the result before closing the door.

### Opening the safe

1. Press "ON". The lock signals with a beep and the green light comes on.
2. Enter code 1 (factory code 1: 123456)
3. Turn the lock knob clockwise within 4 seconds.

### Lock the safe

1. Close the door completely. Make sure nothing gets caught
2. Turn the knob counterclockwise until it stops.

### Changing Master code

1. Open the lock
2. Press "ON" and then "ENTER".
3. Press 1 and then "ENTER".
4. Enter the current code and then press "ENTER". The lock signals with 2 beeps and flashes.
5. Enter a new 6-8 digit code and then press "ENTER". The lock signals with 2 beeps and flashes.
6. Enter the new 6-8 digit code again and then press "ENTER". The lock signals with 2 beeps and flashes.

### Changing battery

- When the battery level is low, the lock indicates by a red light flashing 5 times, with an accompanying beep after "ON" button has been pressed. Immediately replace the battery that sits on the inside of the top of the door.  
Change to an alkaline 9 volt battery (6LR61).
- If the battery is completely depleted, emergency power can be supplied to the lock from the outside as follows:
  1. Place A 9 volt battery (6LR61) against the poles that are below and above "PS", see the picture below.
  2. Observe the location of the poles: + top - bottom.
  3. Enter the code as usual and open the door.
  4. Replace the battery on the inside of the cabinet.

