Elevate Dual Monitor Arm⁵⁸

PARTS AND TOOLS PART 1

A X1 PCE

B X1 PCE

C X4 PCS M4X10 NOT NEEDED FOR DUAL MONITOR ARM

D X4 PCS NOT NEEDED FOR DUAL MONITOR ARM

E X4 PCS NOT NEEDED FOR DUAL MONITOR ARM

F X1 PCE 2mm


G X1 PCE 5mm

T X1 PCE Mont Included


Before installation: Please follow the instructions. If there is a step you don't understand, please contact your sales representative. Note that all measurements and conditions must be verified on site. Neither Forming Function nor any of its distributors can be held liable for product malfunction or other defects caused by improper installation.



TENSION ADJUSTMENTS AND ROTATION LOCK

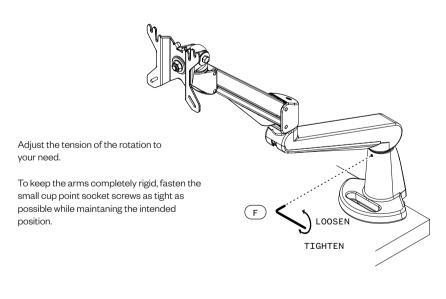

Optional: Fasten the screw with the Allen key (F) if you desire to limit the rotational movements to 180°

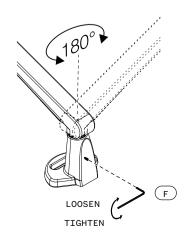



STEP 1

Use the 2 mm Allen key (F) to loosen the screw that is keeping the arms of the monitor arm (A) in the clamp and remove it as seen in the illustration. Put the arm and hexagon cup point screw (B) aside somewhere close as it will bere-inserted for step 3.


Note! If the hexagon oup point screw (C) is not mounted to the monitor arm, then remove the arm and put aside for **STEP 3.**

STEP 2

Turn the table clamp upside down, and adhere the rubber pad (B).


Turn the table clamp over again. Loosen the center bolt enough so that the clamp fits around the edge of your table.


Once in place around the edge of your table, tighten the center bolt using Allen Key (H) until you feel resistance.

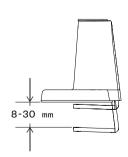


STEP 3

Reinsert the arm in the table clamp and reattach the set screw from STEP 1.

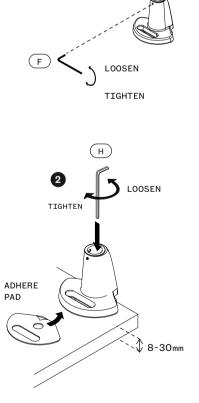

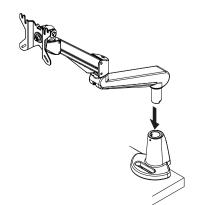


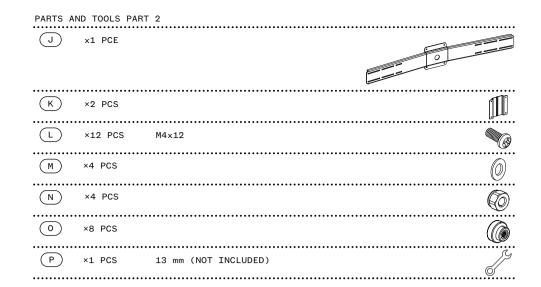


TURN NUTS CLOCKWISE Description Lift the VESA bracket with the mounted monitor, and examine how close the monitor can be to the center of the bar. Then, insert the VESA bracket pins into the track of the bar and lock them to the track using the knob nuts (O). Angle the monitor as you see fit.

STEP 4

Mount the Dual bar to the arm. Lift the bar into monitor and pass the screws (L) through one by one. If necessary use the washers (M) and fasten using the using the nuts (N).

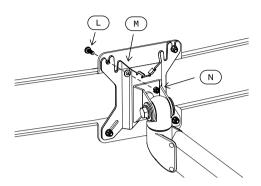


Place the monitor face down on a flat surface. Align the VESA on a flat surface. Align the VESA bracket (K) holes and fasten using screws (L). Repeat procedure for both monitors.

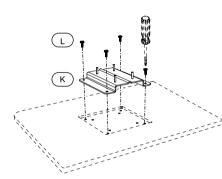

STEP 5

Use wrench or impact wrench to tighten the bar to a vertical position, until fully rigid. Hold it up to the desired position and use the VESA bracket or bar as a gripping surface to counter the force of the wrench and gravity. This step is easiest if you are two persons:


Repeat procedure for both VESA brackets.

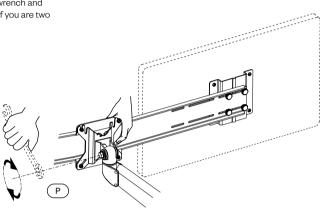


DO NOT SKIP THIS STEP

STEP 6

Unattach the cable collector and route the cables through. Once satisfied, re-attach the collector back into place. Proceed by continuing the routing through the cable clip.

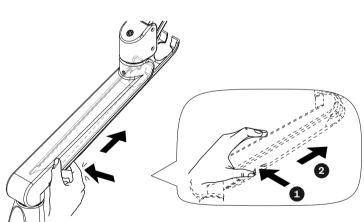

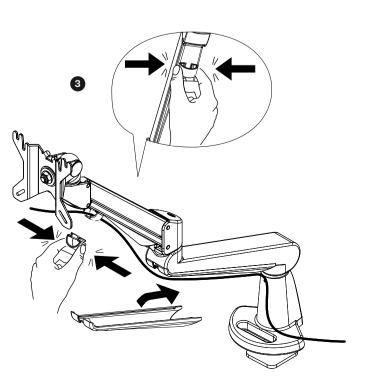

TENSION ADJUSTMENTS

CAUTION:

Support and hold on to the arm while adjusting the tension.

ADJUSTMENT:

Use the Allen key provided to adjust the tension to correspond to the weight of the desired monitor. Turn the Allen key counter-clockwise to adjust for heavier monitors; clockwise for lighter monitors. Once the adjustment is done, the monitor should be experienced as weightless and the monitor should remain in any position without dropping nor rising.

RECOMMENDATIONS:

- 8-14 kg.
- The products loading capacities are based on monitors' center of gravity less than 3 cm from the end of the VESA interface.
- Loading capacity could be reduced if the monitor size is greater than 26" or if the thickness exceeds 5.5 cm.
- All product specifications in catalogues are subject to change without notice.

